

Appliance Control (Phase to PWM Translator)

# FDB-P1H

Appliance Control (Phase to PWM Translator)

#### INSTRUCTION

#### Installation instructions

FFFLUX Appliance Control (Phase to PWM Translator)


#### Type FDB-PIH

Input Rating 120VAC 60Hz 5A 120VAC 60Hz Input Signal Lighting Load DIMSLIM or DIMSLIMLINE

Output Rating Max. 600W Output Signal PWM, Max, 10pcs per row line APPLIANCE CONTROL


## **Mounting dimensions**



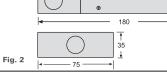



**Mounting Arrangements** 

Fig. 1

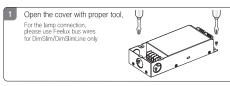




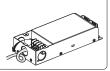

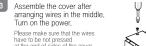


have to be not pressed at the end of sides of the cover.

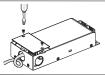

Set the decoder by controlling light intensity from the lowest stage to the highest 2-3times repeatedly.


Please make sure to use with general dimmers below

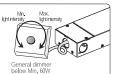

#### Warning information

This product is for indoor use only. Fitting and removal must take place only with the supply disconnected. Permanent mains connection must be undertaken only by a qualified specialist. Always fully insert connections! Pay attention to the marking (arrows) on the

Meaning of crossed-out wheeled dustbin: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or cumps, hazardous substances can leak into the groundwater and get into the foodchain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least free of

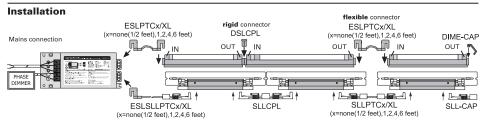

Maximum 10 pcs per channel and Maximum 600W irrespective of channel Please use Feelux booster(FBB-P2P) for an additional line

The direction of the supply must be observed prior to installation (IN .... OUT). Fixing of the luminaires takes place via mounting clips. These must be fixed at the required point with a wood screw and the luminaire can be snapped in place. Impress the cover carefully at OUT at the last luminaire of a lighting row and fix it.

### INSTRUCTION

## Installation instructions FFFLUX Appliance Control (Phase to PWM Translator)

Type FDB-PIH

**FEELUX** 

Input Rating 120VAC 60Hz 5A Input Signal 120VAC 60Hz Lighting Load DIMSLIM or DIMSLIMLINE


Output Rating Max. 600W


Output Signal PWM, Max, 10pcs per row line





#### Wiring Diagram with Dimmer

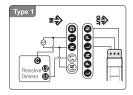

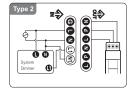

For Resistive Dimmer

For System Dimmer

#### CAUTION

- 1. High Voltage-Disconnect power supply before servicing
- 2. Do not connect to the incorrect channel of Input/(and or) Output
- 3. End cap shall be enclosed the output connectors, If not use
- 4. Interconnection Cord : Feelux ESLPTCx/XL (x=none(1/2 feet),1,2,4,6 feet) for DimSlim and ESLSLLPTCx/XL (x=none(1/2 feet),1,2,4,6 feet) for DimSlimLine

Risk of electrical shock - More than one source of supply - Disconnect all power Sources before servicing Do not use one line electronic dimmer

Indoor Use Only

Listed when used with Feelux Ballast DimSlim/DimSlimLine Lamp Fixture Only

One-year warranty, with one-to-one free replacement after inspection. (excluding breakage due to transportation & mis-handling)

#### ■ WARNING INFORMATION:

Meaning of crossed-out wheeled dustbin: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or cumps, hazardous substances can leak into the groundwater and get into the foodchain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least free of charge.