

SlimLamp Seamless LED Installation Instructions

Please open all cartons immediately to ensure all material is on-site and undamaged. Any claims must be filed within 15 days of receipt of product.

Please read all assembly and installation instructions of Feelux products

- 1. Before attempting to install or use fixture read, read and understand the following installation instructions and safety labels.
- 2. If you have any questions, please contact Feelux Lighting Technical Support at: (678)668-7005 ext. 113 or techsupport@feeluxlighting.com
- 3. Feelux product must be installed by a licensed electrician in accordance with all National and Local Electrical and Construction Codes and Regulations.
- 4. Verify electrical plan.
- 5. Ensure the main power supply is off before installing or wiring fixtures.
- 6. Do not install a fixture if the unit, lens, housing or power cables are damaged.
- 7. Fixtures have no serviceable parts.
- 8. Do not use a fixture for any voltage for which it is not rated.
- 9. Do not exceed the specified voltage, current or wattage for any fixture.
- 10. Feelux Lighting complies with Part 15 of the FCC rules. Class B Digital Apparatus complies with Canadian ICES-003.
- 11. Confirm that Feelux unit is compatible with proposed dimming control system.
- 12. IMPORTANT NOTE Seamless LED requires Feelux Hardwire Box For non-dimming installation or SLLPC/XL.
- 13. IMPORTANT NOTE Seamless LED requires interface module for dimming. Dimming can be 0-10v or phase controlled.
- 14. IMPORTANT NOTE Dimmer interface (FDB-P10) Dip Switch must be set to 1-10V setting.

Feelux Lighting SlimLamp Seamless LED Installation Instructions

- 1. Feelux Seamless is a line voltage product and operates from 100 240V.
- 2. 277V requires the Feelux M2O unit. Please contact factory.
- 3. Seamless LED has a maximum connection wattage of 400W.
- 4. Seamless LED dimming interface can operate up to 20 Seamless LED modules on two channels.
- a. Load is 10 fixtures PER channel maximum.
- b. If longer dimming run is required than the Booster Unit can be applied.
- 5. Feelux PTC Connecting Cables (Jumpers) cannot be modified.
- 6. Seamless LED fixtures have a directional power connection. Incoming power is always connected to the maleend of the fixture.

Tips

- 1. Make certain all surfaces are free of dirt and debris prior to installation.
- 2. Check that fixtures are properly connected.
- 3. After installation remove/blow off all construction dust and debris.
- 4. Fixtures must be protected from paint and paint splatter.
- 5. Use Mounting brackets for proper alignment.
- 6. If installation is non-dimming, then fixtures are powered with either cord and plug OR MHWB and connecting cable.
- 7. If installation is dimming, a dimming interface and connecting cable is required. The MHWB is not needed.

Troubleshooting

- 1. Check electrical and mechanical connections points.
- 2. Confirm that LED lamps are properly seated in sockets and locked in place.
- 3. Check that cables, connectors are locked in place.
- 4. Is the fixture run over the maximum wattage/maximum run length?
- 5. Is the wattage exceeded for the hardwire box or dimming interface?
- 6. If required, is booster being used?
- 7. Is dimming control compatible with dimming interface?
- 8. Note: Dimming Interface is 2 Channel. Max load per channel is 10 fixtures regardless of wattage.
- a. After max load, Booster is required.









